

Adres cubuguna <http://192.168.1.1> yaz p, Enter'layın.

Değiştirmediyse default değerlerini modeminizin kullanım klavuzundan (manuel) bulacağınız değerleri girin. Eğer kullanım klavuzunuz (manuel) yoksa Default değerleri

User Name : admin

Password : admin

Aşağıdaki Home sayfası çıkacaktır. Burdan Services seçin.

http://192.168.1.1/ - Microsoft Internet Explorer

Dosya Düzen Görünüm Sık Kullanılanlar Araçlar Yardım

Adres <http://192.168.1.1/>

Google

TRENDCHIP ADSL Router

Status Quick Start Interface Setup **Advanced Setup** Access Management Maintenance Status Help

Device Info System Log Statistics

Device Information

Firmware Version : 2.7.0.21_3.5.6.0
MAC Address : 00:13:33:01:54:eb

LAN

IP Address : 192.168.1.1
Subnet Mask : 255.255.255.0
DHCP Server : Enabled

WAN

Virtual Circuit : PVCD
Status : Connected
Connection Type : PPPoE
IP Address : 85.104.12.254
Subnet Mask : 255.255.255.255
Default Gateway : 85.104.12.1
DNS Server : 195.175.39.40

ADSL

ADSL Firmware Ver : FwVer:3.5.6.0_A_TC3084 HwVer:T14.F7_0.0
Line State : Showtime
Modulation : G.DMT
Annex Mode : ANNEX A

Bitki Internet

Başlat eMule v0.47c Mynet Adres Defteri ... http://192.168.1.1/ ... TR 23:22

Services sayfası nda NAT seçin. NAT Options seçeneklerinden NAT Rule Entry seçin.

Adres http://192.168.1.1/

CONEXANT

Home LAN WAN Bridging Routing Services Admin

NAT | RIP | FireWall | IP Filter | Bridge Filter | DNS | Blocked Protocols | DDNS | UPnP | SNTP

Use this page to configure Network Address Translation, a security protocol in which the device translates the IP addresses of your LAN computers to new addresses before sending data out on the Internet.

NAT Options: NAT Global Info
NAT Global Info
 Enable NAT Rule Entry
NAT Translations

NAT Global Information	
TCP Idle Timeout(sec):	86400
TCP Close Wait(sec):	60
TCP Def Timeout(sec):	60
UDP Timeout(sec):	300
ICMP Timeout(sec):	6
GRE Timeout(sec):	300
ESP Timeout(sec):	300
Default Nat Age(sec):	240
NAPT Port Start:	50000
NAPT Port End:	51023

Çıkan NAT Rule Configuration menüsünden Add tıklayın.

GS8100 Configuration Manager GUI - Microsoft Internet Explorer

Dosya Düzen Görünüm Sık Kullanılanlar Araçlar Yardım

Geril Ara Sık Kullanılanlar

Adres http://192.168.1.1/

CONEXANT

Home LAN WAN Bridging Routing Services Admin

NAT | RIP | FireWall | IP Filter | Bridge Filter | DNS | Blocked Protocols | DDNS | UPnP | SNTP

Network Address Translation (NAT) Rule Configuration

Each row in the table lists a rule for translating addresses. See Help for instructions on creating NAT rules.

NAT Options: NAT Rule Entry

Rule ID	IF Name	Rule Flavor	Protocol	Local IP From	Local IP To	Action
1	ALL	FILTER	ANY	0.0.0.0	255.255.255.255	Stats
2	ALL	NAPT	ANY	0.0.0.0	255.255.255.255	Stats
10	ppp-0	NAPT	ANY	192.168.1.1	255.255.255.255	Stats

Add Refresh Help

Copyright © 2001-2004 Conexant Systems, Inc. All rights reserved.

Aşağıdaki NAT Rule - Add menüsü çkacakt r.

NAT Rule - Add

NAT Rule Information				
<i>Rule Flavor:</i>	<input style="width: 90%;" type="text" value="RDR"/>			
<i>Rule ID:</i>	<input style="width: 90%;" type="text"/>			
<i>IF Name:</i>	<input style="width: 90%;" type="text" value="ALL"/>			
<i>Protocol:</i>	<input style="width: 90%;" type="text" value="ANY"/>			
<i>Local Address From:</i>	<input style="width: 20%;" type="text"/>	<input style="width: 20%;" type="text"/>	<input style="width: 20%;" type="text"/>	<input style="width: 20%;" type="text"/>
<i>Local Address To:</i>	<input style="width: 20%;" type="text"/>	<input style="width: 20%;" type="text"/>	<input style="width: 20%;" type="text"/>	<input style="width: 20%;" type="text"/>
<i>Global Address From:</i>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
<i>Global Address To:</i>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
<i>Destination Port From:</i>	<input type="text" value="Any other port"/>	<input type="text" value="0"/>		
<i>Destination Port To:</i>	<input type="text" value="Any other port"/>	<input type="text" value="65535"/>		
<i>Local Port:</i>	<input type="text" value="Any other port"/>	<input type="text" value="0"/>		

Copyright © 2001-2003 GlobespanVirata, Inc. All rights reserved.

Bu menüyü Kullanicaginiz port icin örnek ; TCP:4662 port'u için aşağıdaki gibi doldurun. (Bu örnekte PCnizin IP Nosunun 192.168.1.10 olduğu varsayılmıştır. Siz kendi PC IP Nonuzu yazın. Not almıştınız). Submit basın.

NAT Rule - Add

NAT Rule Information				
<i>Rule Flavor:</i>	<input style="width: 90%;" type="text" value="RDR"/>			
<i>Rule ID:</i>	<input style="width: 90%;" type="text" value="3"/>			
<i>IF Name:</i>	<input style="width: 90%;" type="text" value="ppp-0"/>			
<i>Protocol:</i>	<input style="width: 90%;" type="text" value="TCP"/>			
<i>Local Address From:</i>	<input type="text" value="192"/>	<input type="text" value="168"/>	<input type="text" value="1"/>	<input type="text" value="10"/>
<i>Local Address To:</i>	<input type="text" value="192"/>	<input type="text" value="168"/>	<input type="text" value="1"/>	<input type="text" value="10"/>
<i>Global Address From:</i>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
<i>Global Address To:</i>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
<i>Destination Port From:</i>	<input type="text" value="Any other port"/>	<input type="text" value="4662"/>		
<i>Destination Port To:</i>	<input type="text" value="Any other port"/>	<input type="text" value="4662"/>		
<i>Local Port:</i>	<input type="text" value="Any other port"/>	<input type="text" value="4662"/>		

PCnizin IP No

PCnizin IP No

Copyright © 2001-2003 GlobespanVirata, Inc. All rights reserved.

Aynı şekilde UDP Portunuzuda acabilirsiniz.

Sonra Services menüsünde IP-Filter seçin.

GS8100 Configuration Manager GUI - Microsoft Internet Explorer

Dosya Düzen Görünüm Sık Kullanılanlar Araçlar Yardım

Adres http://192.168.1.1/

CONEXANT

Home LAN WAN Bridging Routing Services Admin

NAT | RIP | FireWall | **IP Filter** | Bridge Filter | DNS | Blocked Protocols | DDNS | UPnP | SNMP

Network Address Translation (NAT) Rule Configuration

Each row in the table lists a rule for translating addresses. See Help for instructions on creating NAT rules.

NAT Options: NAT Rule Entry

Rule ID	IF Name	Rule Flavor	Protocol	Local IP From	Local IP To	Action
1	ALL	FILTER	ANY	0.0.0.0	255.255.255.255	Stats
2	ALL	NAPT	ANY	0.0.0.0	255.255.255.255	Stats
10	ppp-0	NAPT	ANY	192.168.1.1	255.255.255.255	Stats

Add Refresh Help

Copyright © 2001-2004 Conexant Systems, Inc. All rights reserved.

Ç kacak menüde DMZ Default Action - Accept yap n.

CONEXANT

Home LAN WAN Bridging Routing Services Admin

NAT | RIP | FireWall | IP Filter | Bridge Filter | DNS | Blocked Protocols | DDNS | UPnP | SNMP

IP Filter Configuration

This Page is used to View and Modify IP Filter Global and Rule Configuration.

Security Level: None Public Default Action: Accept

Private Default Action: Deny **DMZ Default Action: Accept**

Rule ID	I/F	Apply Stateful Inspection	Direction	Rule Action	In I/F	Log Option	Rule Description	Oper. Status	Action(s)
10	Public	Enable	Incoming	Accept	N/A	Disable	1.Protocol eq TCP 2.TCP Flag All 3.Dest Port equal to 80		Stats

Commit & Reboot menüsünde önce Commit, sonra Reboot tıklıyoruz.



Modeminiz kapanıp açılacaktır , işlem tamamdır